

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar  
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件



①	Motoreinheit	Motor unit	JP50328
②	Elast. Verbindung	Elastic connector	JP42792
③	Flansch	Flange	JP42793
④	Rückschlagventil	Reflux valve	JP42794
⑤	Gummiklappe	Valve flap	JP46841
⑥	Basisplatte	Basis plate	JP42797
⑦	Dichtband	Sealing tape	JP47966
⑧	Überschiebmuffe	Collar	JP47287
⑨	Wartungsdeckel	Service lid	JP42798
⑩	Klemmflansch	Clamping flange	JP42795
⑪	Pumpenlüftung	Pump ventilation	JP42799
⑫	Steckdichtung	Plug in seal	JP45099
⑬	Behälter	Tank	JP50329
⑭	Dichtungssatz	Seal set	JP42801
⑮	Schraubensatz	Screw set	JP42800
⑯	Auftriebssicherung	Anti floating	JP42796

**PENTAIR JUNG PUMPEN**  
MOTOR COMPLI 310 E



①	Steuerung	Control unit	<b>JP42802</b>
②	Leitung	Cable	<b>ZBR49190</b>
③	Niveauschaltung	Level control unit	<b>ZBR49220</b>
④	Motordeckel	Motor cover	<b>ZBR20490</b>
⑤	Schwimmer	Float	<b>JP42771</b>
⑥	Kondensator	Capacitor	<b>ZBR25560</b>
⑦	Stator + Gehäuse	Stator + Housing	<b>ZBR25540</b>
⑧	Lagersatz	Bearing set	<b>ZBR20710</b>
⑨	Rotorwelle	Rotor shaft	<b>ZBR20640</b>
⑩	Motorabdichtung	Motor mech. seal	<b>ZBR25510</b>
⑪	Flansch	Flange	<b>ZBR20700</b>
⑫	Schraubensatz	Screw set	<b>ZBR49230</b>
⑬	Lauftrad	Impeller	<b>ZBR49200</b>
⑭	Dichtungssatz	Seal set	<b>ZBR49240</b>
⑮	Motoradapter	Motor adaptor	<b>ZBR49210</b>